



Cafetera  
TCF006910DF

# TELSTAR


**LA CALIDAD** NO CUESTA MÁS

**MANUAL DE INSTRUCCIONES**

## ASPECTOS DE SEGURIDAD IMPORTANTES:

Cuando use aparatos electrónicos debe seguir siempre las reglas básicas de seguridad incluyendo las siguientes:

- Lea todas las instrucciones antes de usar el coffee maker.
- Este aparato no ha sido previsto para el uso de personas (incluyendo niños) con capacidades físicas, sensoriales o mentales reducidas, o bien con falta de experiencia o conocimiento, a menos que personas con dichas condiciones hayan recibido supervisión o instrucciones concernientes al uso del aparato por una persona responsable por su seguridad.
- Niños deberán ser supervisados para asegurarse que no jueguen con el aparato.
- No toque las superficies calientes del coffeemaker. Use la agarradera.
- Para protegerse contra un shock eléctrico no sumerja el cable eléctrico ni enchufe, ni el coffee maker en agua o cualquier otro líquido.
- Apague el Coffee maker y desenchufe el cable eléctrico del toma corriente cuando no esté en uso y antes de limpiar.
- No use el aparato si tiene el cable eléctrico dañado, o tras haber fallado o haya sido dañado de cualquier manera. Lleve el producto al centro de servicio más cercano para su revisión y reparación o ajuste.
- El uso de accesorios no recomendados por el fabricante puede resultar en daños por fuego, shock eléctrico o inclusive puede lastimar a otras personas.
- No use en exteriores.
- No deje el cable eléctrico colgando sobre la mesa, sobre el mostrador, o bien sobre alguna superficie caliente.
- No coloque este aparato encima o cerca de gas caliente, quemadores, o encima de un horno caliente.
- No use el coffeemaker para otros fines que no sean los previstos.
- La jarra ha sido diseñada para el uso exclusivo de este electrodoméstico, no se debe usar para otros propósitos.
- No coloque la jarra caliente sobre superficies frías.
- Este aparato ha sido previsto para uso del hogar, no uso comercial.
- El coffeemaker no debe insertarse en ningún líquido.
- Este aparato ha sido previsto para uso en el hogar o similares tales como:
  - Para la cocina de tiendas, oficinas, u otros ambientes laborales.
  - Casas
  - Para clientes en hoteles, moteles, u otros ambientes residenciales
  - Hospedajes tipo "Bed and Breakfast" o ambientes similares.

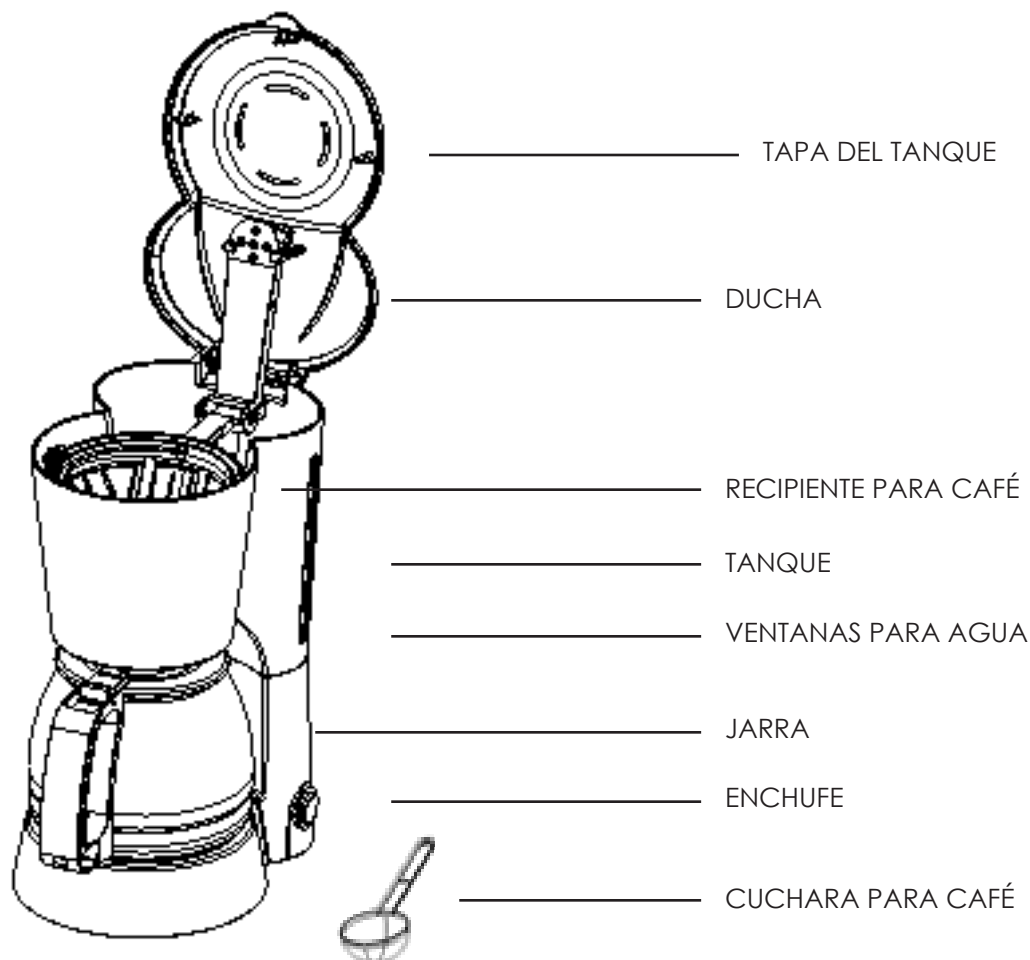

## GUARDE ESTAS INSTRUCCIONES

### USAR SU CAFETERA POR PRIMERA VEZ

Antes de usar por primera vez, se recomienda que la máquina sea lavada tres veces con un poco de vinagre blanco en el modo de hacer café, pero claro sin café en polvo.

### ANTES DE USAR SU CAFETERA

1. Abra la tapa del tanque
2. Llene el tanque con agua limpia y fresca hasta el nivel correspondiente a la cantidad de tazas de café que vaya a requerir.

3. Abra el soporte del recipiente para café, coloque el filtro de papel en el recipiente para café.
4. Correspondiendo a sus preferencias, con la cuchara para café coloque la cantidad que desee de café en polvo en el filtro.
5. Cierre el recipiente con café.
6. Coloque la jarra de vidrio sobre la base.
7. Presione el botón de encendido-apagado "ON/OFF". La luz roja indica que la unidad está funcionando.
8. Tras finalizar la unidad mantendrá el café caliente, y se desconectará automáticamente 40 minutos después. Si no se requiriera mantener caliente el café solo presione el conmutador y la unidad dejará de funcionar.

#### LIMPIEZA DE LAS PARTES EXTERNAS DEL CAFETERA

1. Asegúrese de desenchufar el cable de corriente.
2. Espere a que la unidad completa esté fría antes de limpiar.
3. La unidad debe limpiarse con una toalla húmeda suave con un poco de jabón. Luego con una toalla seca remueva y seque la unidad.



#### CORRECTO DESECHO DE ESTE PRODUCTO:

Este ícono indica que no debe desecharse con la basura regular del hogar.

Para prevenir el el posible daño al medio ambiente o a la salud humana, recicle responsablemente para promover la reutilización de los recursos materiales.


Para devolver su aparato usado por favor use los sistemas colectores, o contacte a la tienda en la que adquirió este producto para que ellos se encarguen de correcto desecho del aparato.

Para más información ingrese a: [www.calidadtelstar.com](http://www.calidadtelstar.com)

## IMPORTANT SAFEGUARDS:

When using electrical appliances, basic safety precautions should always be followed including the following.

- Read all instructions before using the coffeemaker.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch the coffee maker's hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the power cord, power plug or coffeemaker in water or other liquid.
- Turn the coffeemaker off and unplug the power cord from the power source when the coffeemaker is not in use and before cleaning.
- Do not operate any appliance with a damaged cord or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let the power cord hang over the edge of a table or counter or touch hot surface.
- Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
- Do not use the coffeemaker for other reasons than its intended use.
- The carafe is designed for use with this appliance, do not use it for other purpose.
- Do not place hot carafe on a cold surface.
- The appliance is only used for household, not for commercial use.
- The appliance must not be immersed.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments

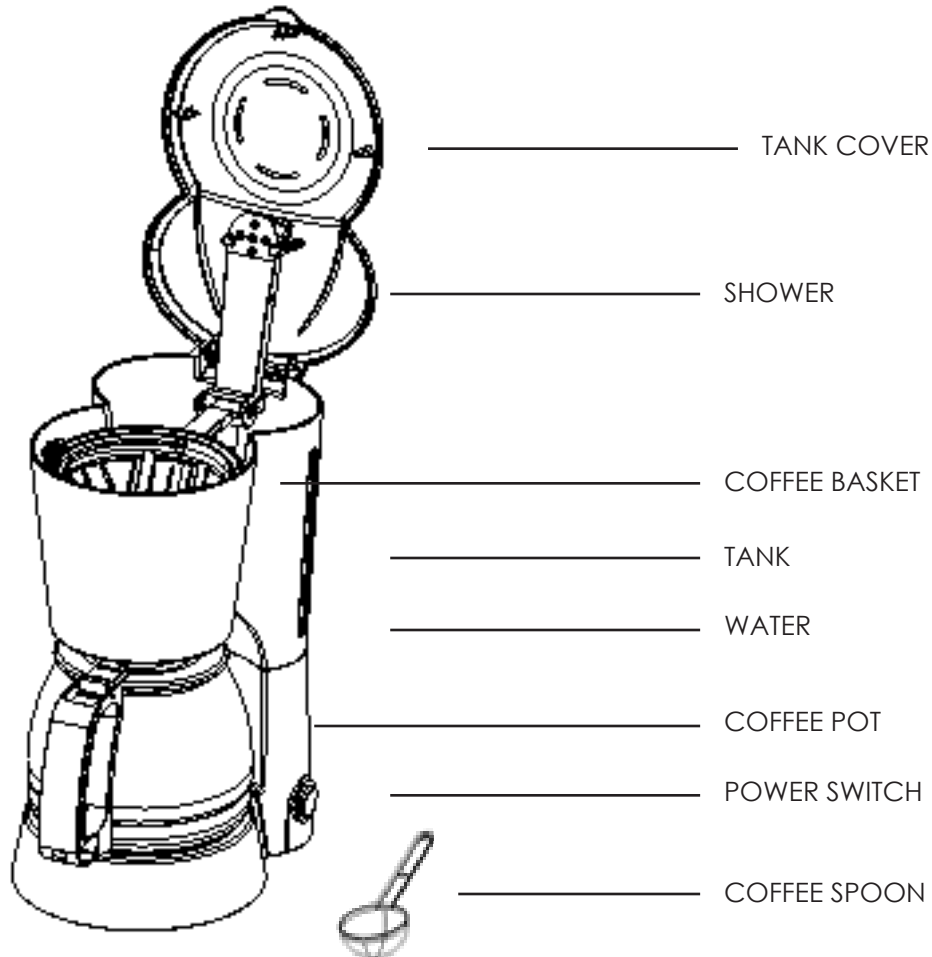

## SAVE THESE INSTRUCTIONS

### USING FOR THE FIRST TIME

Before using for the first time, advised you to wash the machine three times with one pint of plain white vinegar. By brewing coffee mode, of course, without coffee powder!

### BEFORE USING YOUR COFFEEMAKER

1. Open the tank cover;
2. Fill the water tank with fresh, clean water up to the level corresponding to the number of cups of coffee required.

3. Open the basket support, place the paper filter in the filter basket.
4. Corresponding to your taste and put suitable coffee powder on the paper filter by spoon;
5. Close the basket support;
6. Put the glass on heat preservation sheet in the unit;
7. Press "ON/OFF" button, Indicator light shows the red and unit is operating at the same time.
8. After finishing working, the unit will preserve coffee heat ,and it will power off automatically in 40 minutes. If there is no need to preserve heat,please press switch and the unit will stop working..

#### **CLEANING FOR EXTERNAL PARTS OF COFFEE MAKER**

1. Be sure to unplug the power plug from electrical supply source before cleaning.
2. Wait for the whole appliance cool down before cleaning.
3. The appliance should be cleaned with a soft cloth moisten with mild soap and wipe dry.



#### **CORRECT DISPOSAL OF THIS PRODUCT:**

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



***TELSTAR***

***LA CALIDAD NO CUESTA MÁS***

[www.calidadtelstar.com](http://www.calidadtelstar.com)