



LICUADORA

TBL900210MD

TELSTAR

LA CALIDAD NO CUESTA MÁS

MANUAL DE INSTRUCCIONES

INSTRUCCIONES IMPORTANTES DE SEGURIDAD

Al usar aparatos eléctricos, se deben tomar precauciones básicas de seguridad.
siempre se debe seguir incluyendo lo siguiente:

LEA TODAS LAS INSTRUCCIONES, SALVAGUARDIAS Y ADVERTENCIAS ANTES DE UTILIZAR LA LICUADORA

1. Para protegerse contra el riesgo de descarga eléctrica, no coloque (por ejemplo, cable de alimentación, cuerpo principal) en agua u otro líquido.
2. Es necesaria una estrecha supervisión cuando se utiliza cualquier aparato cerca o cerca niños.
3. Desenchufe del tomacorriente cuando no esté en uso, antes de colocar o quitar piezas, y antes de limpiar.
4. Evite el contacto con las piezas móviles.
5. No opere ningún aparato con un cable o enchufe dañado o después de la el aparato funciona mal, se cae o se daña de cualquier manera. Regreso electrodoméstico al centro de servicio autorizado más cercano para su examen, reparación o ajuste eléctrico o mecánico.
6. El uso de accesorios no recomendados o vendidos por el fabricante, puede provocar incendios, descargas eléctricas o lesiones.
7. No lo use al aire libre.
8. No deje que el cable cuelgue del borde de la mesa o mostrador.
9. No utilice el aparato si el tamiz giratorio está dañado.
10. Mantenga las manos y los utensilios fuera del recipiente mientras licúa para reducir la riesgo de lesiones graves a personas o daños a la licuadora. Un raspador puede debe usarse, pero debe usarse solo cuando la licuadora no esté funcionando.
11. Las cuchillas están afiladas. Manipule con cuidado.
12. Para reducir el riesgo de lesiones, nunca coloque las cuchillas del conjunto del cortador en la base. sin jarra correctamente colocada.
13. Siempre opere la licuadora con la tapa en su lugar.
14. El uso de accesorios, incluidos frascos de conservas, no recomendados por el
15. El fabricante puede causar un riesgo de lesiones a las personas.
16. No mezcle líquidos calientes.
17. Este aparato tiene un enchufe polarizado (una clavija es más ancha que la otra).

Precaución:

GUARDE ESTAS INSTRUCCIONES.
SOLO PARA USO DOMÉSTICO.


SISTEMA DE SEGURIDAD

Este aparato está equipado con protector térmico de motor. Si el aparato se sobrecalienta, se apaga automáticamente. Desenchufe el aparato y déjelo enfriar hasta que esté a temperatura ambiente, luego ponga el enchufe de nuevo a la toma de corriente y encienda el aparato de nuevo. Comuníquese con su distribuidor o con un centro de servicio autorizado si se activa con demasiada frecuencia.



Producto	Modelo	Corriente	Watts
Licadora NutriMax Mini	TBL900210MD	120V ~ 60Hz	900W

INSTRUCCIONES DE USO



Precaución:


¡Las cuchillas están afiladas! Tenga extrema precaución al manipular los conjuntos de cuchillas.

Sujételos siempre por la base del conjunto de cuchillas.


①

No haga funcionar el aparato vacío.



INSTRUCCIONES DE USO

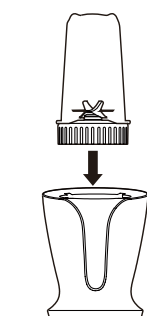

②

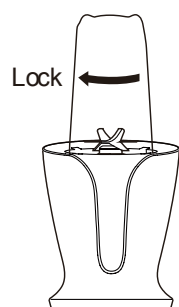

③

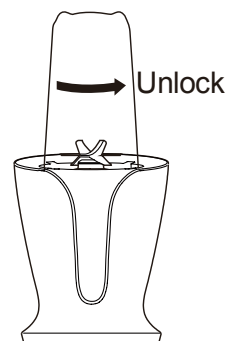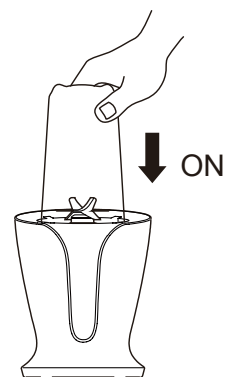

- NO PROCESA ALIMENTOS CALIENTES O LIQUIDOS CALIENTES. No procese alimentos que estén más caliente que 70°C. Deje enfriar los ingredientes muy calientes antes de procesarlos. Este producto no es adecuado para mezclar alimentos secos.
- Nunca intente quitar el frasco mientras el aparato todavía está funcionando.
- Nunca deje el aparato desatendido mientras está en uso.

INSTRUCCIONES DE USO

1. Retire todo el material de embalaje y las etiquetas del aparato.
2. Lave las tapas, frascos y accesorios en agua tibia jabonosa con un paño suave. Tenga cuidado al lavar los conjuntos de cuchillas ya que las cuchillas muy afilado.
3. Enjuague y seque completamente.
4. Los frascos, las tapas y el conjunto de cuchillas son todos aptos para lavar en lavavajillas. Se recomienda que las tapas y la cuchilla se retire de los frascos antes de colocarlos en el lavavajillas.
5. Limpie la base del motor con un paño húmedo.

IMPORTANTE: asegúrese de que la base del motor está enchufada antes de su uso.

④

1. Coloque la base del motor en un nivel limpio y seco como la superficie de un mostrador o una mesa.
2. Agrega los ingredientes al frasco.
3. Coloque el conjunto de cuchillas en el frasco y gírelo. Apretar firmemente, hasta que tenga un buen sellado. (Figura 1).
4. Dé la vuelta al frasco y colóquelo en la base del motor, alineando las pestañas de la jarra con la base del motor. La unidad está lista para su uso. (Fig. 3).
5. Presione el frasco en intervalos cortos para activar. (Figura 4).
6. Gire el frasco en sentido contrario a las manecillas del reloj (Fig.5) y tire hacia arriba para remover. (Figura 6).
- ⑤ 7. Coloque el frasco en posición vertical y retire la cuchilla girando la base en sentido anti-horario. Asegúrese de guardar la cuchilla adjunto a un frasco vacío cuando no está en uso.



6. Coloque la tapa en el frasco, gire para sellar ¡y disfrutar!
7. Asegúrese de que la base del motor esté desenchufada cuando no esté en uso.

Propósito	Envase Sugerido	Tipo de Alimento
Mezclas	12 oz. / 18 oz. 24 oz. / 32 oz	Masas - Dips
Salsas	12 oz. / 18 oz. 24 oz. / 32 oz	Vinagretas / Aderezos / Salsas simples
Licuadaos congelados	12 oz. / 18 oz. 24 oz. / 32 oz	Helados
Jugos, batidos y Smoothies	18 oz. /24 oz. / 32 oz.	Frutas / Vegetales / Hojas verdes

ANÁLISIS DE ANORMALIDADES

Manejo de Anormalidades


1. En caso de anomalías como sonidos, olores, humo, etc, debe inmediatamente terminar su uso. cortar la electricidad, apagar el producto.
2. Si el producto no funciona, por favor verifíco el suministro eléctrico, que esté debidamente conectado y que esté en posición de encendido y todas sus partes en la posición correcta.

3. Si el producto continúa sin funcionar tras haber realizado los pasos 1 y 2 por favor consulte con el equipo técnico.

Análisis de fallos

Síntomas	Análisis y posibles causas	Acciones correctivas
El producto no funciona	No presionó el indicador de encendido.	Mantenga el botón de encendido presionado.
Fallo en la mezcla	Excesiva cantidad de alimentos para procesar	Reduzca la cantidad de ingredientes
	Los ingredientes se adhieren a la cuchilla	Corte es suministro eléctrico, limpie la cuchilla.
Olor anormal, producto caliente, humo.	Excesiva cantidad de ingredientes	Reduzca la cantidad de ingredientes
	El producto se ha usado por prolongado periodo de tiempo	Reduzca el tiempo de uso del producto.
	La temperatura de los ingredientes a procesar es muy alta	La temperatura de los ingredientes no debe exceder los 60° C

LIMPIEZA

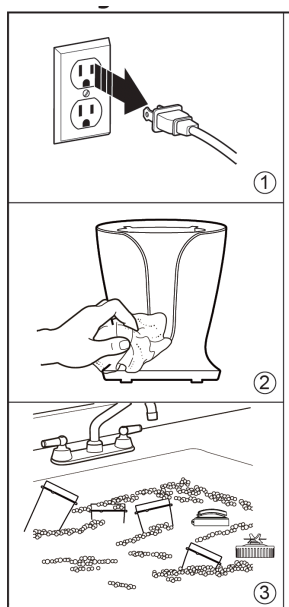

PRECAUCIÓN:

Asegúrese de que el motor esté desconectado del tomacorriente antes de remover o insertar cualquier complemento de la licuadora.
No inmersa el motor en agua o cualquier otro líquido.

1. Separe o remueva todas las partes entre sí.
2. Limpie la base del motor con una toalla o paño húmedo y seque con otro completamente seco.
3. Coloque los envases en el lavavajillas. Coloque las tapas y cuchillas en la parte superior del mismo. Tenga cuidado al manipular las cuchillas pues son muy filosas.

NOTA:

Puede lavar también los envases llenándolos de agua hasta el límite máximo y agregarle un poco de detergente. Cierre el frasco con la cuchilla, coloque en la base de motor y pulse algunas veces. No llene el frasco más del límite máximo o se rebalsará. Una vez limpio, remueva del motor y enjuague con agua corriendo. Permita a las partes secar bien antes de almacenar.

Cualquier otro servicio deberá ser llevado a cabo por un representante autorizado de servicio técnico.

Mantenimiento:

Asegure el cordón de corriente debajo de la base enrollando el cordón. No coloque nada encima de éste. Almacene los envases o frascos y el resto de accesorios al lado del producto donde no vaya a causar algún daño o represente un peligro.

RESETEAR EL TERMOSTATO DEL MOTOR:

La licuadora se ha diseñado con un sistema único de seguridad, previendo el daño del motor y el mismo sistema debería permitir evitar sobrecarga. Si el aparato se ha sobrecargado, el motor se detendrá. Para resetear proceda con los siguientes pasos:

1. Desconecte el producto del tomacorriente


Remueva y vacíe el frasco y asegúrese que no haya ningún alimento atorado en las cuchillas.

2. Permita que el producto se enfríe por aproximadamente 30 minutos.

3. Re instale el envase en la base del motor, conecte de nuevo al tomacorriente.

4. Proceda a usar de nuevo el producto como antes, mientras que verifica que no exceda las capacidades máximas recomendadas.

DIAGRAMA DEL PLAN ELÉCTRICO:

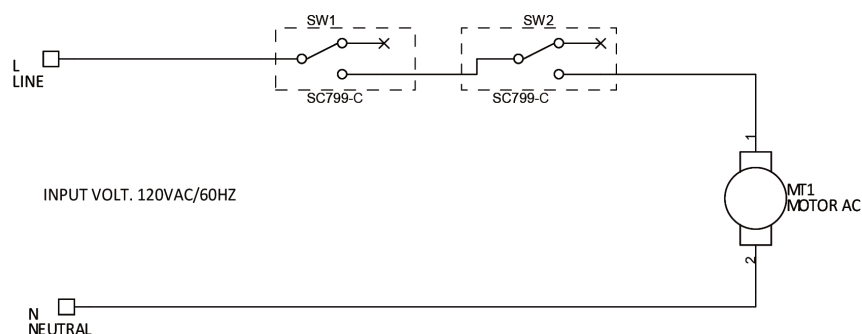

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed including the following:

IMPORTANT SAFEGUARDS

1. Read all instructions.
2. To protect against risk of electrical shock do not put (e.g. power cord, main body) in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
8. Do not use outdoors .
9. Do not let cord hang over edge of table or counter.
10. Do not use the appliance if the rotating sieve is damaged.
11. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running .
12. Blades are sharp. Handle carefully.
13. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
14. Always operate blender with cover in place.
15. The use of attachments, including canning jars, not recommended by the manufacturer may cause a risk of injury to persons.
16. Do not blend hot liquids.
17. This appliance has a polarized plug(one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Caution

SAVE THESE INSTRUCTION.

HOUSEHOLD USE ONLY.


SAFETY SYSTEM

This appliance is equipped with motor thermal protector. If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down until room temperature then put the mains plug back into the power outlet and switch on the appliance again. Please contact your dealer or an authorized service center if it is activated too often.



Product name	Model No.	Rated voltage	Rated power
TABLE BLENDER	TBL900210MD	120V ~ 60Hz	900W

INSTRUCTIONS FOR USE




①

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:




IMPORTANT: Attachments are interchangeable.

IMPORTANT: Never run the appliance empty.

INSTRUCTIONS FOR USE

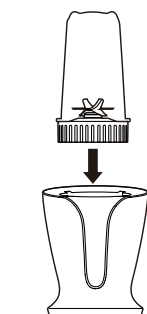

②

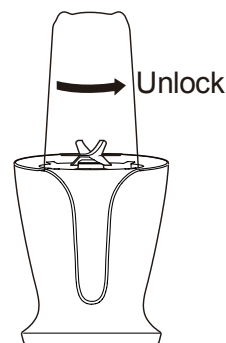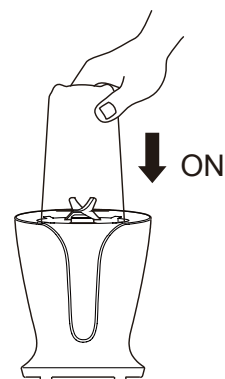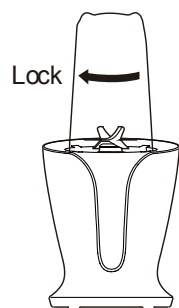

- Blades are sharp! Use extreme caution when handling the blade assemblies. Always hold them by the base of the blade assembly.
- **DO NOT PROCESS HOT FOODS OR HOT LIQUIDS.** Do not process food that is hotter than 70°C. Allow very hot ingredients to cool before processing. This product is not suitable for mixing dry food.
- Never attempt to remove the jar while the appliance is still running.
- Never leave the appliance unattended while in use

1. Remove all packaging material and labels from the appliance.
2. Wash the lids, jars and attachments in warm, soapywater with a soft cloth. Use caution when washing the blade assemblies as the blades are very sharp.
3. Rinse and dry thoroughly.
4. Jars, lids and blade assembly are all dishwasher safe. It is recommended that the lids and blade assembly be placed on the top rack. Ensure that the blade assembly are removed from the jars before placing in the dishwasher.
5. Wipe the motor base clean with a damp cloth.

IMPORTANT: Make sure that the motor base is plugged before use.

1. Place the motor base on a clean, dry, level surface such as a counter or table top.
2. Add ingredients to the jar.
3. Place the blade assembly onto the jar and turn it on tightly, until you have a good seal. (Fig. 1).
4. Turn the jar upside down and place it onto the motor base, aligning the tabs on the jar with the motor base. the unit is ready for use. (Fig. 3).
5. The jar in short intervals to activate. (Fig. 4).
6. The jar counterclockwise (Fig. 5) and pull straight up to remove. (Fig. 6).
7. Turn the jar upright and remove the Blade Assembly by twisting the blade assembly counterclockwise. Be sure to store the Blade Assembly attached to an empty jar when not in use.
8. Place the Sip & Seal lid onto the jar, twist to seal and enjoy!
9. Make sure that the motor base is unplugged when not in use.

Purpose	Suggested Jar	Type of food
Mixing	12 oz. / 18 oz. 24 oz. / 32 oz	batters - Dips
Sauces	12 oz. / 18 oz. 24 oz. / 32 oz	vainagretes / salad dressings / simple sauces
Frozen blending	12 oz. / 18 oz. 24 oz. / 32 oz	Ice cream
nutrient, juices, smoothies	18 oz. /24 oz. / 32 oz.	Fruits/ vegetables/ green leafy

ABNORMALITY ANALYSIS AND HANDING


Abnormality Handling

1. In case of abnormalities such as abnormal noises, smell, smoke, etc., you should immediately cut off power and stop use.
2. If the product cannot work, please check if the power supply is connected, if the switch is put to the ON position and if fittings are installed in place.
3. 3. If the product still cannot work after checks mentioned above, please consult the designated repair centre for maintenance.

Fault Analysis and Elimination

Symptom	Analysis of Possible Causes	Countermeasure
Product does not work	Did not press the inching switch	Keep the point switch in the pressed state
Mixing sword master	Excessive amount of food processing	Reduce the quantity of ingredients
	Ingredients stick to blade	Cut off the power supply, clean up the blade on the ingredients
The abnormal odor products, hot, the phenomenon such as smoking	Excessive amount of food processing	Reduzca la cantidad de ingredientes
	Product continuous working time is too long	Reduce the quantity of ingredients
	Processing the ingredients of temperature is too high	
		The temperature of the ingredients do not exceed 60 ° C

CLEANING

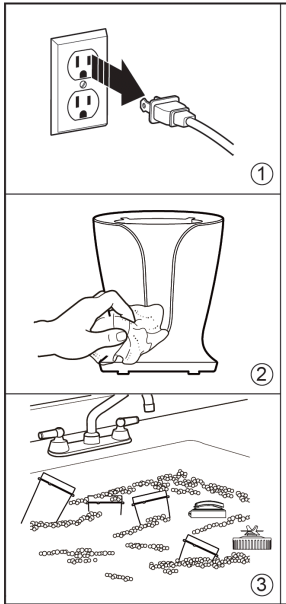

CAUTION

Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.

DO NOT immerse the motor base into water or any other liquid.

1. Separate/remove all parts from each other.
2. Clean the motor base with a damp cloth and wipe dry.
3. Place jars in the dishwasher. Place the lids and attachments on the top rack. Use caution when handling the blade assemblies as the blades are very sharp.

Note:

You may also wash the jars by filling the jar to the Max fill line with warm water and a drop of dish washing detergent, placing the blade assembly on the jar and pulsing a few times. Do not fill the jar more than Max fill line with water because it will overflow. Once clean, remove the jar from the motor base. Rinse the jar, attachment and lid under running water. Allow all the parts to dry before storing.

Any other servicing should be performed by an authorized service representative.

Maintaining


Secure the power cord underneath the base by wrapping the cord around the cord wrap. Do not place anything on top. Store the jars and the rest of the attachments along side the appliance where they will not be damaged and won't cause a hazard.

RESETTING THE MOTOR THERMOSTAT:

Blender designed a unique safety system which prevents damage to the unit's motor and drive system should you inadvertently overload your appliance. If the appliance is being overloaded, the motor will stop. To reset the appliance, follow the resetting procedure below:

1. Unplug the appliance from the electrical outlet.
2. Remove and empty the jar and ensure that no food is jamming the cutting blades.
3. Allow the appliance to cool for approximately 30 minutes.
4. Re-install the jar onto the base and re-plug the appliance into the electrical outlet.
5. Proceed to use the appliance as before while making sure not to exceed the recommended maximum jar capacities.

CIRCUIT PRINCIPLE DIAGRAM

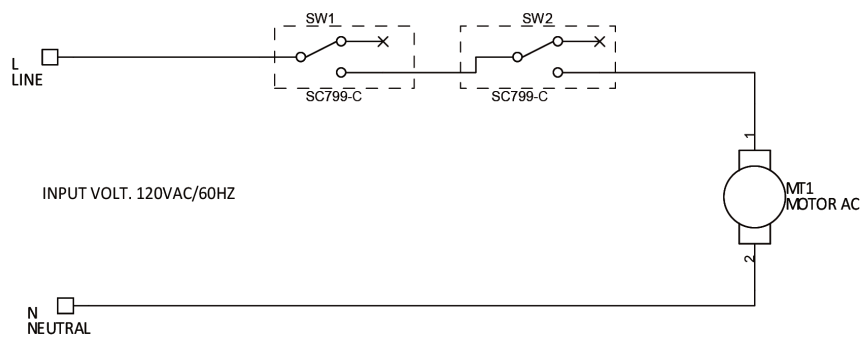



TELSTAR

LA CALIDAD NO CUESTA MÁS

www.calidadtelstar.com